

# PCV Catch Can

## FORD 1.6L – 2.0L – 2.3L PFDI

1. Install the catch can assembly:

Position the can to be level with the top of the engine.

Use a bolt to fasten the can bracket to the Telespar.

2. Install a line from the valve cover to the left port of the can:

Remove the PCV hose from the turbo inlet port.

Install an aluminum adapter with a 5/8" black rubber hose into the PCV hose.

Connect the hose to the left port of the catch can.

3. Install a line from the PCV valve to the center port of the can: Disconnect the PCV hose from the intake manifold.


Install an aluminum adapter with a 5/8" black rubber hose into the PCV hose.

Connect the hose to the center port of the catch can.

4. Install a line from the intake manifold to the right port of the can:

Install a connector with a 5/8" black rubber hose to the intake port. Connect the hose to the right port of the catch can.

For non turbo applications cap off the port to the turbo inlet or routed the port to the air intake assembly that a goes to the air box.

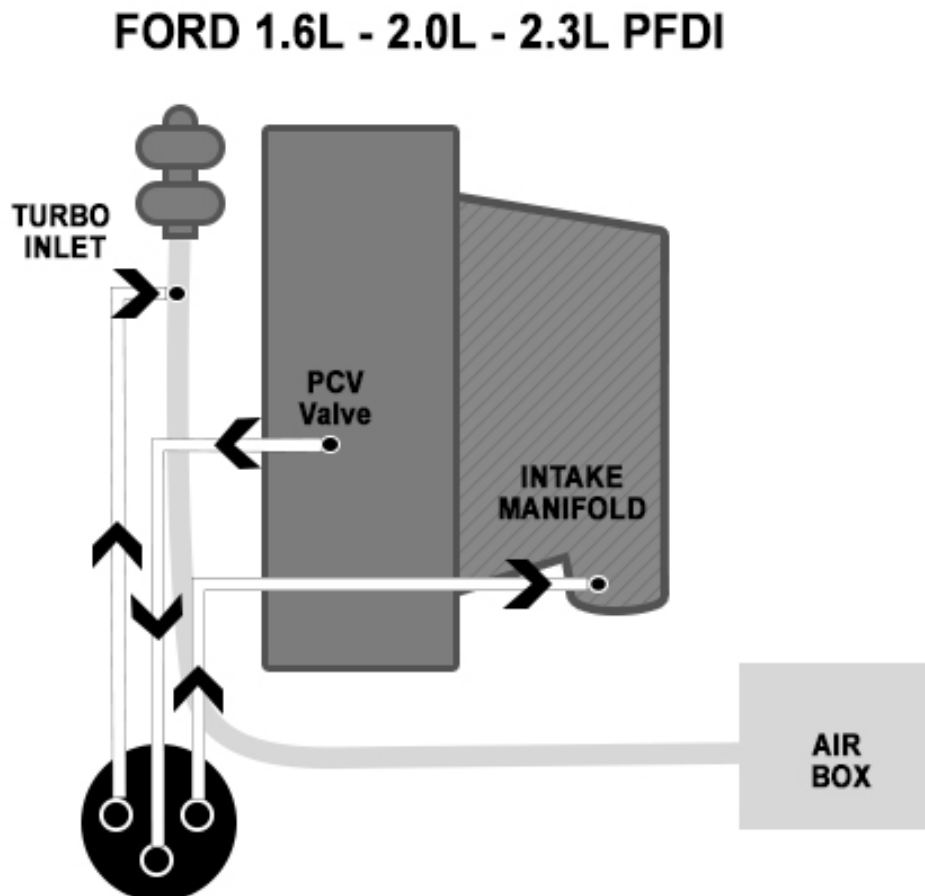

\* it is recommended to lightly grease the inside of the quick connects with o-ring lubricant.