

# PCV Catch Can

## FORD 3.5L – 2.7L GTDI

1. Install the catch can assembly:

Position the can to be level with the top of the engine.

Use a bolt to fasten the can bracket to the Telespar.

2. Install a line from the turbo inlet line to the left port of the can:

Remove the PCV hose from the turbo inlet port.

Install an aluminum adapter with a 5/8" black rubber hose into the PCV hose.

Install a connector to the driver side valve cover port.

Install a connector to the turbo inlet port.

Install a T fitting into a 5/8" black hose 12" from the turbo inlet port.

Connect the hoses to the T fitting.

Connect the hose to the left port of the catch can.

3. Install a line from the PCV valve to the center port of the can:

Disconnect the PCV hose from the intake manifold.


Install an aluminum adapter with a 5/8" black rubber hose into the PCV hose.

Connect the hose to the center port of the catch can.

4. Install a line from the intake manifold to the right port of the can:

Install a connector with a 5/8" black rubber hose to the intake port.

Connect the hose to the right port of the catch can.

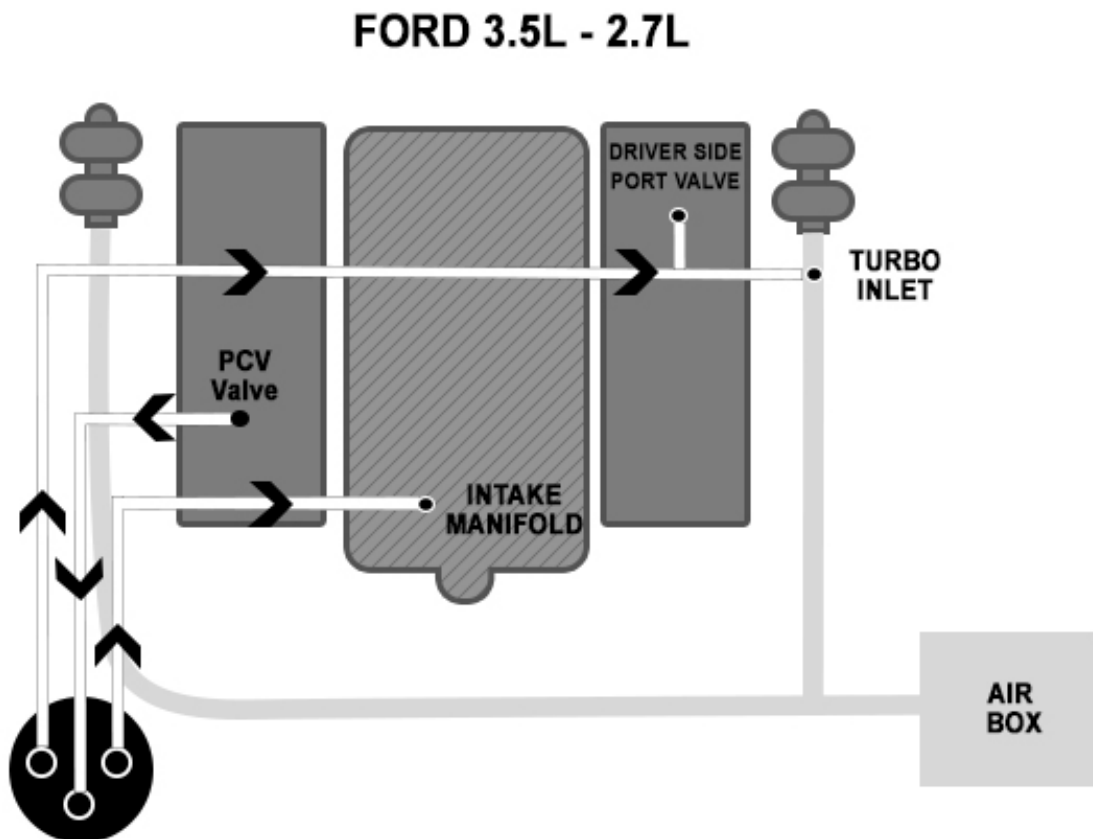

\* it is recommended to lightly grease the inside of the quick connects with o-ring lubricant