


PCV Catch Can

FORD 5.0L – 7.3L PFDI

1. Install the catch can assembly:
Position the can to be level with the top of the engine.
Use a bolt to fasten the can bracket to the Telespar.
2. Install a line from the PCV valve to the center port of the can:
Disconnect the PCV hose from the intake manifold.
Install an aluminum adapter with a 5/8" black rubber hose into the PCV hose.
Connect the hose to the center port of the catch can.
3. Install a line from the intake manifold to the right port of the can:
Install a connector with a 5/8" black rubber hose to the intake port.
Connect the hose to the right port of the catch can.
4. Cap off empty port.

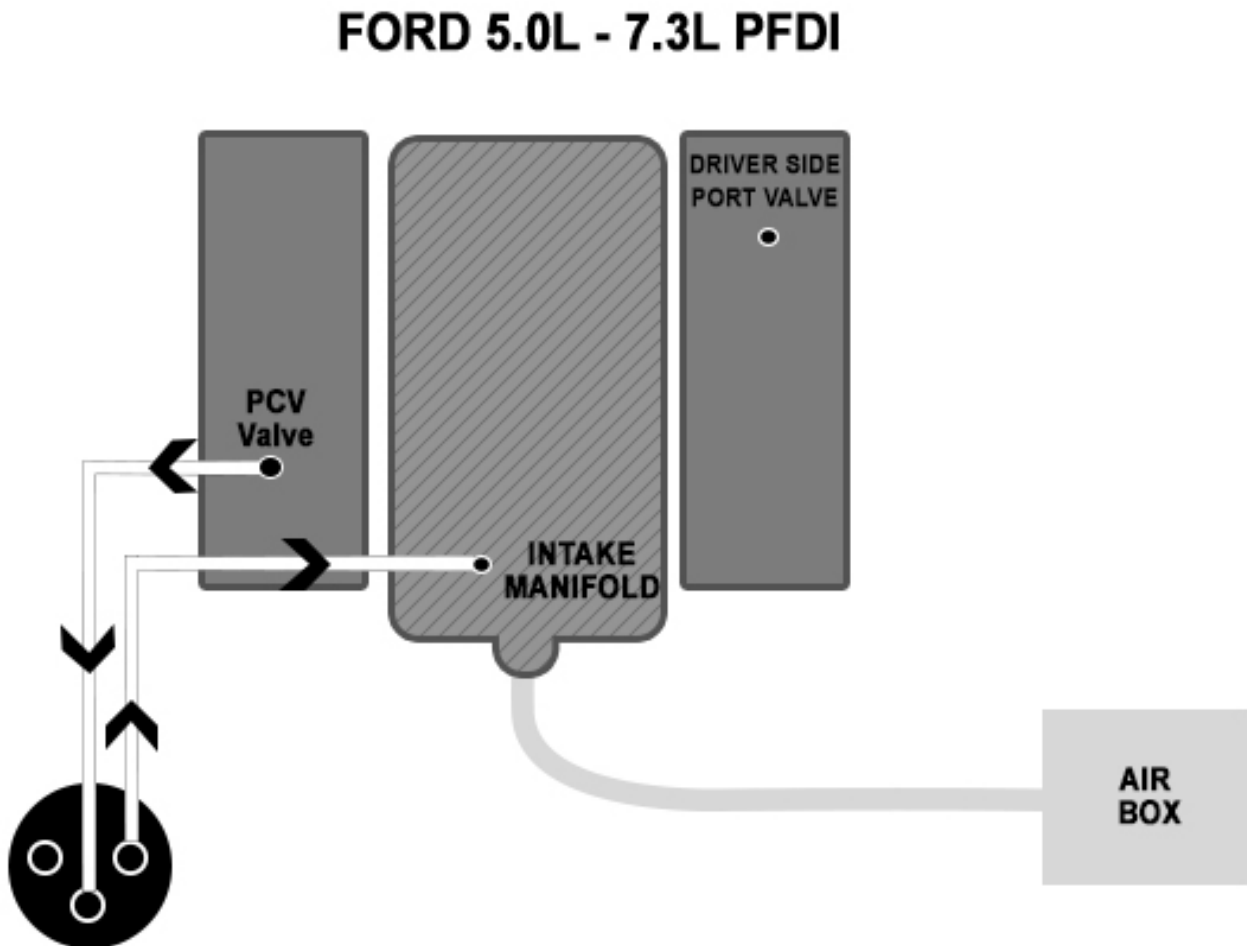

* it is recommended to lightly grease the inside of the quick connects with o-ring lubricant